

Operating and Safety Instructions

Read the instructions of the proprietary tool that is provided on the trolley in conjunction with these instructions.

Safety instructions

1. Always wear eye protection.
2. Keep children away. Always keep visitors at a safe distance from work areas.
3. Keep work areas clean.
4. Do not wear loose clothing which can become entangled in machine. Wear protective hair covering to contain long hair.

Work area

1. Keep work area well lit, clean and tidy. Cluttered and dark areas increase the chance of accidents.
2. Do not operate power tools in potentially explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools generate sparks which may ignite dust or fumes.
3. Keep children and bystanders well away during power tool operations. Distractions can cause you to lose control.

Electrical safety

1. Power tool plugs must always match the outlet. Do not modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets reduce the risk of electric shock.
2. Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. If your body is earthed or grounded there is an increased risk of electric shock.
3. Do not expose power tools to rain or other wet conditions. Water entering a power tool will damage it and increase the risk of electric shock.
4. Do not abuse the cord. Do not use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
5. When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

Personal safety

1. Remain alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool when tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious injury.
2. Use safety equipment. Always wear eye protection.
3. Avoid accidental starting. Before plugging in ensure any switches are in the off position.
4. Remove any adjusting key or wrench before turning on the power tool. A wrench or a key left attached to a rotating part of the power tool may result in injury.
5. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from all moving parts.

6. If devices are provided for the connection of dust extraction and collection facilities, always ensure these are connected and properly used.

Power tool use and care

1. Do not force a power tool.
2. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools.
3. Maintain power tools. Check for misalignment or binding of moving parts.
4. Keep cutting tools clean and sharp.
5. Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool.

Intended use

This equipment is designed for routing wood. Aluminium can also be processed with corresponding cutters.

Tool-specific safety rules

Do not exceed the maximum speed specified on the tool and/or keep to the speed range.

Machine settings

Always remove the power supply plug from the socket before carrying out any work on the machine.

Mortising machine and routers

Always connect the machine to the dust extractor.

Maintenance and care

Always remove the power supply plug from the socket before carrying out any work on the machine.

Risk of electric shock

Never grasp the mains plug with wet hands. Check the connection lead and mains plug for damage before each use. Have a damaged connection lead replaced immediately by an authorised Customer Service point or by an electrician.

General safety notes

The appliance is not intended for use by young children or infirm persons. Young children should be supervised to ensure that they do not play with the appliance. Never leave the machine unattended if the master switch is on.

Finish operation

Empty the vacuum cleaner of sawdust.