



\*4082 Shown in SCPV


## Axis Casement Fastener Timber Specification

Axis casement handles ideally suit the A3 base option however this must be specified at the time of order along with the handing detail.


Refer to the technical documentation for general product information.

Handing of casements:




LH

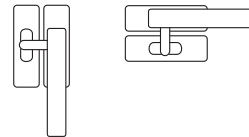




RH

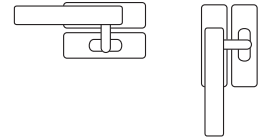

### 4081 - Mortise

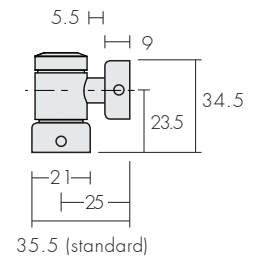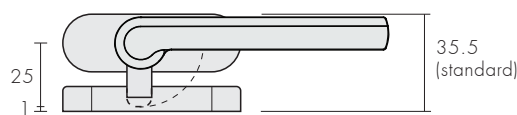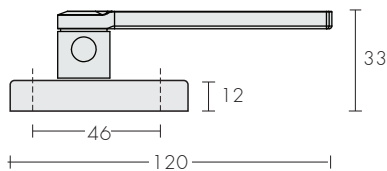

### 4082 - Wedge (0mm offset)

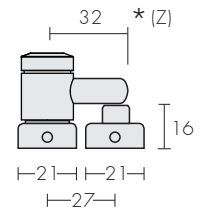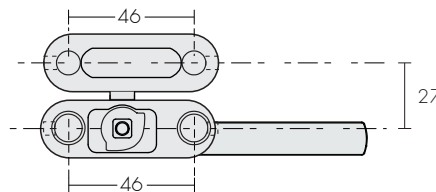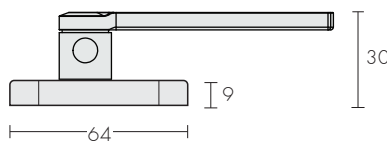

Note: \*[Z] - Extended pins can be provided for wedge fasteners. Specify the distance from the pivot centreline to the end of the pin. We regard this as 'Z' measurement.

### Mortise Flush Strike 4099

This Mortise Strike is designed for applications where there is limited space for the positioning of the casement fastener. Considerations are stile width, glazing depth, frame design and their relationship to the casement fixings. It is flush mounted and is visible fixed.

#### Casement with 4099 Configuration

